



FRONT

3.15"  
80.01mm






 


**QUICK START GUIDE**  
Full HD Streaming Device



100133520\_EN\_230504

**WHAT'S INCLUDED**

Part	Description	Picture
1	Stick x1	
2	Quick Start Guide x1	
3	Remote Control x1	
4	Batteries x2	
5	HDMI Cable x1	
6	Power Adapter x1	

**SAFETY INFORMATION**

**WARNING**

- No parts should be repaired by users.
- Place the device on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Protect the device from high temperatures, humidity, water and dust.
- Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.
- Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).
- Place the device in a well-ventilated location to prevent the accumulation of internal heat.
- Presence of live parts inside the device! Do not open. Risk of electric shock!

**SAFETY INFORMATION**

**CAUTION**

 
**Battery Replacement**

- Risks of explosion if the battery is replaced by an incorrect type:
  - replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types)
  - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion
  - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
  - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

**The Environment for Device**


- Appropriate Operating Temperature: 32°F to 104°F
- Appropriate Operating Humidity: 5% ~ 85% Non-condensing.

**REMOTE CONTROL**

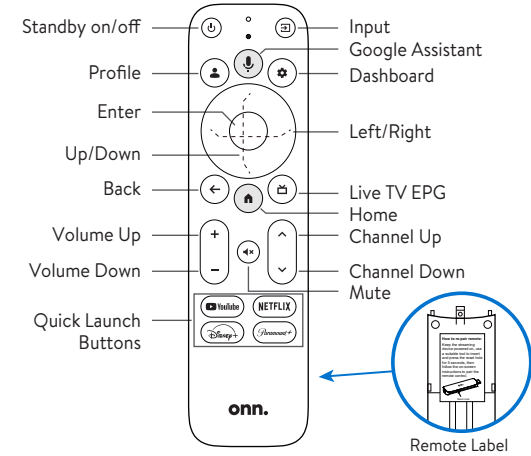


**DETAILS**

 1. Top/Bottom Panel

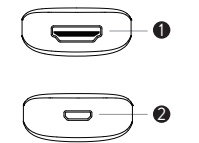

 
2. Back Panel

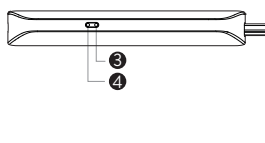


Part	Item	Description
1	HDMI	Connect an HDMI cable from the streaming device to your high-definition TV
2	Micro USB	Connect the Power Adapter to power on the streaming device
3	LED Indicator	White: Active state
4	Reset	Reset and Re-pair Remote: Follow the instructions on the remote label

**SETUP**

 1. Start Up TV  
Turn on your TV before using the onn. Full HD Streaming Device.

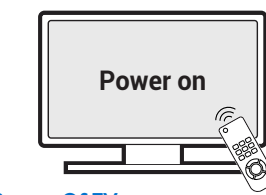


 2. Set Input Source Of TV  
After your TV is turned on, go to the Inputs page where you can switch the input source. Select HDMI Input, e.g. HDMI1.

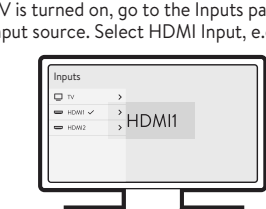


**SETUP**

 3. Connection  
Connect the streaming device to TV with an HDMI cable. Check what HDMI Input you are connecting to, e.g. HDMI1. After the device is powered on, the LED Indicator turns white.

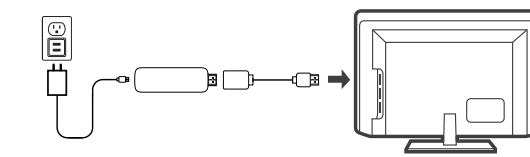

4. Follow On-Screen Setup  
Follow the on-screen instructions to set up your Google TV™.



We'd love to hear from you. Scan with your smartphone camera and let us know what you think.

3.15"  
80.01mm


720.0mm

BACK

3.15"  
80.01mm


**SETUP**

 4.1 Remote Pairing  
Insert the 2 AAA batteries into the remote. Hold both **BACK** and **HOME** button on the remote until pairing is successful.

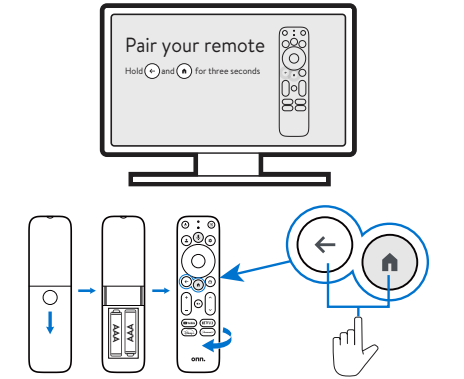


**SETUP**

4.2 Select language  
Follow the on-screen instructions to select your language and region.




 4.3 Select a way to Set Up  
1. On the Google Home app. Install the Google Home app from your phone's app store, then open the Google Home app and scan the QR code on the right side of TV.  
2. On TV: Follow the on-screen setup.

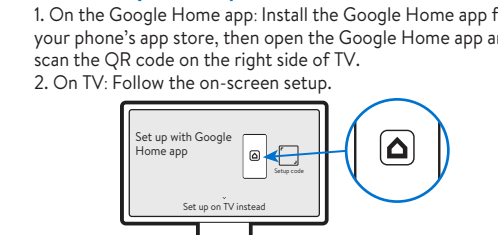


**SETUP**

 4.4 Wi-Fi Connection  
Select your Wi-Fi network and enter the password.

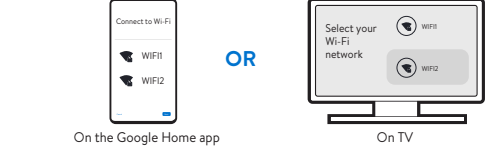


 4.5 Sign in to your Google Account  
Log in to start your personalized Google TV experience.

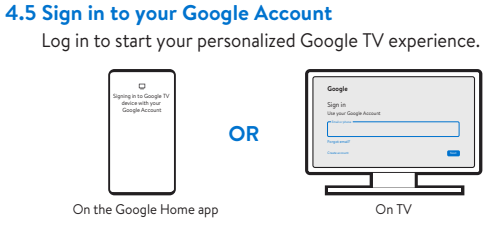


**SETUP**

 4.6 Subscribe Channel  
Follow the on-screen instructions to subscribe to your favorite apps.

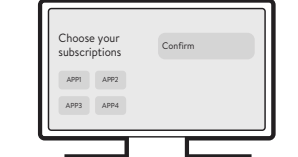


 4.7 Remote Control Set Up  
Follow the on-screen instructions to set up your remote.

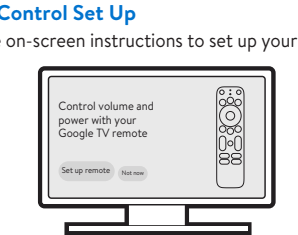

**SETUP**

 5. Start Exploring  
Your Google TV experience is ready.

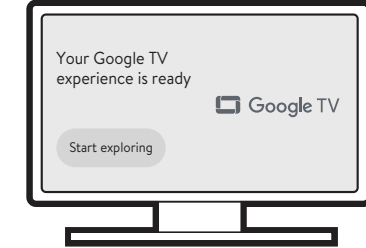

**TROUBLESHOOTING**

- No display after power on?**
  - Confirm the HDMI cable is plugged in properly.
  - Make sure your TV has not entered sleep mode. Press the power button on the remote control to wake up your TV.
- TV has images but no sound?**
  - Make sure your TV is not in mute or low volume.
- Fail to connect to the network?**
  - Make sure Wi-Fi is functional and your box has a strong enough signal from your router.
- Remote control failure?**
  - Replace the battery of the remote control with a new one, and make sure it is placed in the correct polarity.
  - Make sure the reset button is within the range of the TV box.
  - Long press the reset button on streaming box for 5 seconds to reset the remote pair.
- Please use the original accessories to ensure safety and a better experience.**

**COMPLIANCE**

**FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**COMPLIANCE**

**FCC Radiation Exposure Statement**

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**COMPLIANCE**

**Dolby Audio**

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

**HDMI**

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and Google Home are trademarks of Google LLC. Netflix is a trademark of Netflix, Inc. All brands contained herein are trademarks of their respective owners.

3.15"  
80.01mm

720.0mm